


Made in
RSA
Part # 214000

RIECO
PRODUCTS INC
TITAN

Max Weight: 300 lbs / 136kg

Instructions for hanging stair bracket -
masking tape, drill, 3/8" drill bit, pen.

Remove the mounting bracket from the stairs by
opening the "D" clamp and removing the pin.

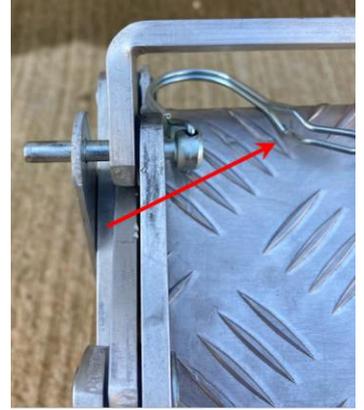

Place the masking tape on the camper chassis below the entrance door. Position the bracket under the door (over the tape). Make sure the bracket does not obstruct any door movement when the door is opening or closing. Mark the four holes on to the tape below the door.



Remove the mounting bracket and proceed to drill the four 3/8" holes in the marked locations on the tape. Remove the tape and position the bracket to align with all four holes. Proceed to set the four screws and washers (supplied) into the bracket holes and onto the camper body. Securely fasten the bracket to the camper. Make sure the bracket is firmly attached. Replace the stairs onto the mounted bracket using the "D" clamps and secure the safety strap by placing it over the "D" clamp pin seen below. The safety strap will prevent the stairs from unfolding.

